


DRIVER SEATS WITH 6-WAY RISER,
(SEE INSTRUCTIONS ON SHEET 2)

DRIVER / OFFICER SEATS WITH MANUAL TRACKS,
(SEE INSTRUCTIONS ON SHEET 3)

SCBA SEATS
(SEE INSTRUCTIONS ON SHEET 4)

ITEM	PN	DESCRIPTION	QTY
1	515760	OWNER'S MANUAL GENERIC LABEL	1
2	384094	CAM SUSPENSION ASSY	1
3	315834	BRKT, AIR VALVE/CONTROL PANEL	1
4	513913	RH SEAT VALVE BKT	1
5	513933	AIR VALVE BKT	1
6	707130	PADDLE AIR VALVE	1
7	707196	SCREW, 1/4-20X3/4, SEMS, HWH, BLKZC	2
8	781846	SCREW, 1/4-14X5/8, HWH, T/S, TAB, TRIBLK	2
9	782380	UNION, 1/4 STRAIGHT, PTC	1
10	519188	AIR HOSE, 1/4" OD, NON- DOT-18"	1
11	516964	AIR HOSE, 1/4" OD, NON- DOT-26"	1
12	781049	SCREW, #10X1/2", POH, T/S, TAB, BLKZC	2
13	707978	SCREW, 7/16-20X1, HHCS, G5, YWZC	2
14	708188(r)	WASHER, 7/16, H-SPLIT, L/W, YWZC	2
15	707195	SCREW, 3/8-16 X 1, HHCS, G5, ZC	6
16	707033	WASHER, 3/8 LOCK(R), PLTD.	6

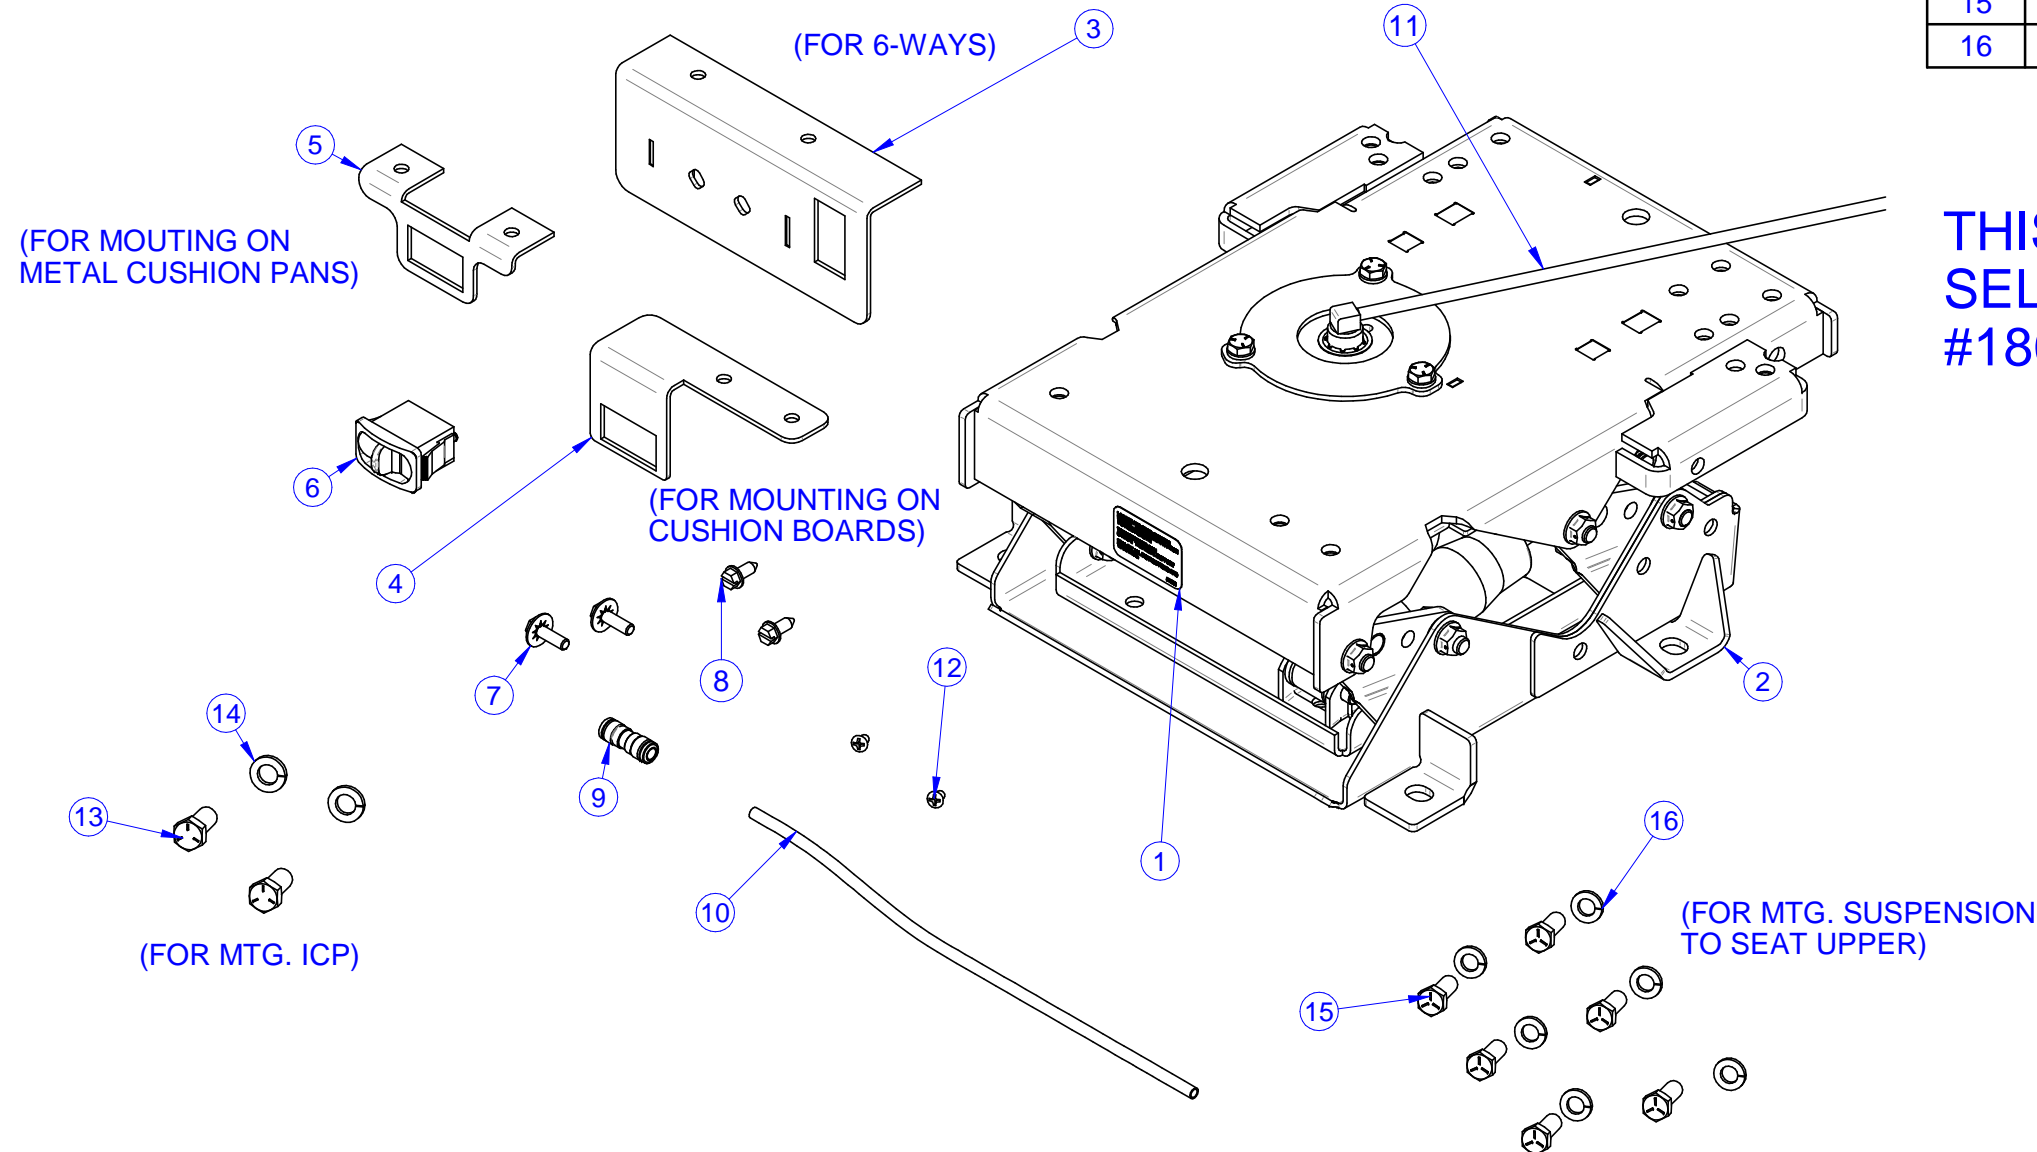


**THIS KIT IS TO REPLACE
SELF-LEVELING SUSPENSION
#180094PS / PIERCE # 1825553.**

REV	DESCRIPTION	DATE	APPROVED
3	UPDATE INSTRUCTIONS; ADD HARDWARE - ECR 119424	06/21/21	DGK
2	REPLACED 707754 W/ 707806; ECR 116240	10/08/19	AAF
1	ADD 515760 DECAL - ECR 115856	05/29/19	AMR

DIMENSIONAL TOLERANCES UNLESS OTHERWISE SPECIFIED: FRACTIONAL ± 1/2" 3 PLACE DECIMALS ± .010 2 PLACE DECIMALS ± .030 1 PLACE DECIMALS ± .50 ANGLES ± 1.0° INTERNAL FEATURES ± .003		SEATS INCORPORATED 1515 INDUSTRIAL ST. REEDSBURG, WI 53959		
TITLE CAM SUSPENSION REPLACEMENT KIT				
DRAWN BY SLS	DATE 12/21/16	SIZE B	FSCM NO. 09704	PART NO. 186094
APPROVED BY 		FILE NAME: 186094.dft		DO NOT SCALE PRINT
				EST WEIGHT: 38.473 lbm
				SHEET 1 OF 4

PLEASE NOTE
This drawing, owned by Seats Incorporated Reedsburg, WI, is conditionally loaned and its disclosure to the recipient is in confidence. In receiving it, the recipient agrees not to reproduce or copy it in whole or part without written consent or to furnish information from it to others or to make any use of it that is, or may be injurious or damaging to Seats Incorporated in any way, and to return it immediately upon request. Seats Incorporated

EFF. DATE: 06/18/19

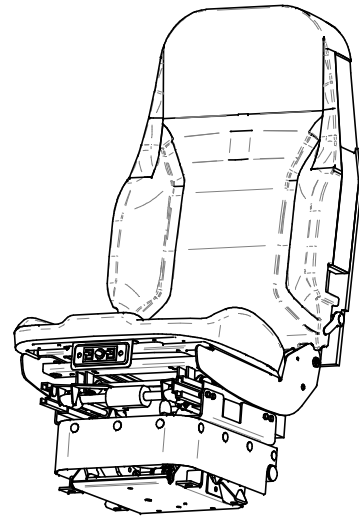



FOR SEATS WITH 6-WAY RISER,

SEAT NUMBER / PIERCE NUMBER
180000 / 1640006

REPLACEMENT INSTRUCTIONS


1. REMOVE (2) BOLTS AND WASHERS HOLDING ICP TO SUSPENSION, REMOVE ICP, SET ASIDE. DISCARD HARDWARE.
2. REMOVE (6) BOLTS AND WASHERS HOLDING RISER TO SUSPENSION. DISCARD HARDWARE
3. REMOVE SEAT UPPER AND RISER ASM, SET ASIDE.
4. REMOVE SKIRT WITH BRACKET OFF SUSPENSION, SET ASIDE.
5. CUT EXISTING AIR LINE CLOSE TO AIR SPRING.
6. REMOVE OLD SUSPENSION FROM FLOOR, DISCARD.
7. INSTALL NEW REPLACEMENT SUSPENSION TO FLOOR.
8. PLACE SKIRT WITH BRACKET ON NEW SUSPENSION, ALIGNING HOLES.
9. ATTACH 26" AIR HOSE TO AIR SPRING (NEW SUSPENSION).
10. REMOVE ORIGINAL CONTROL BRACKET FROM UNDER CUSHION.
DISCARD HARDWARE
REMOVE WIRING FROM BACK OF CONTROLS, REMOVE CONTROLS FROM OLD BRACKET, CUT AIR SUPPLY HOSE AT AIR VALVE
RE-INSTALL CONTROLS INTO NEW BRACKET.
INSTALL NEW AIR PADDLE VALVE IN BRACKET.
11. CONNECT AIR SUPPLY HOSE TO PADDLE VALVE, (IF NEEDED, USING SUPPLIED 18" HOSE AND UNION).
CONNECT AIR HOSE (21" SUPPLIED HOSE) FROM AIR SPRING TO PADDLE VALVE.
12. SCREW NEW BRACKET TO CUSHION PAN, RE-CONNECT CONTROL WIRING.
13. PLACE SEAT UPPER & RISER ASM ON SUSPENSION & SKIRT.
INSTALL NEW (6) SCREWS AND WASHERS TO SUSPENSION.
14. ATTACH ICP WITH (2) NEW SCREWS AND WASHERS TO SUSPENSION.
15. BE SURE ALL HARDWARE HAS BEEN SECURELY FASTENED.
16. INSPECT AND TEST ALL FUNCTIONS.


TORQUE VALUE:
7/16-20 = 55 FT.LB.
3/8-16 = 31 FT.LB.
1/4-20 = 43 IN. LB.

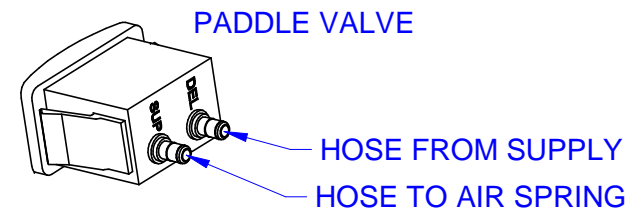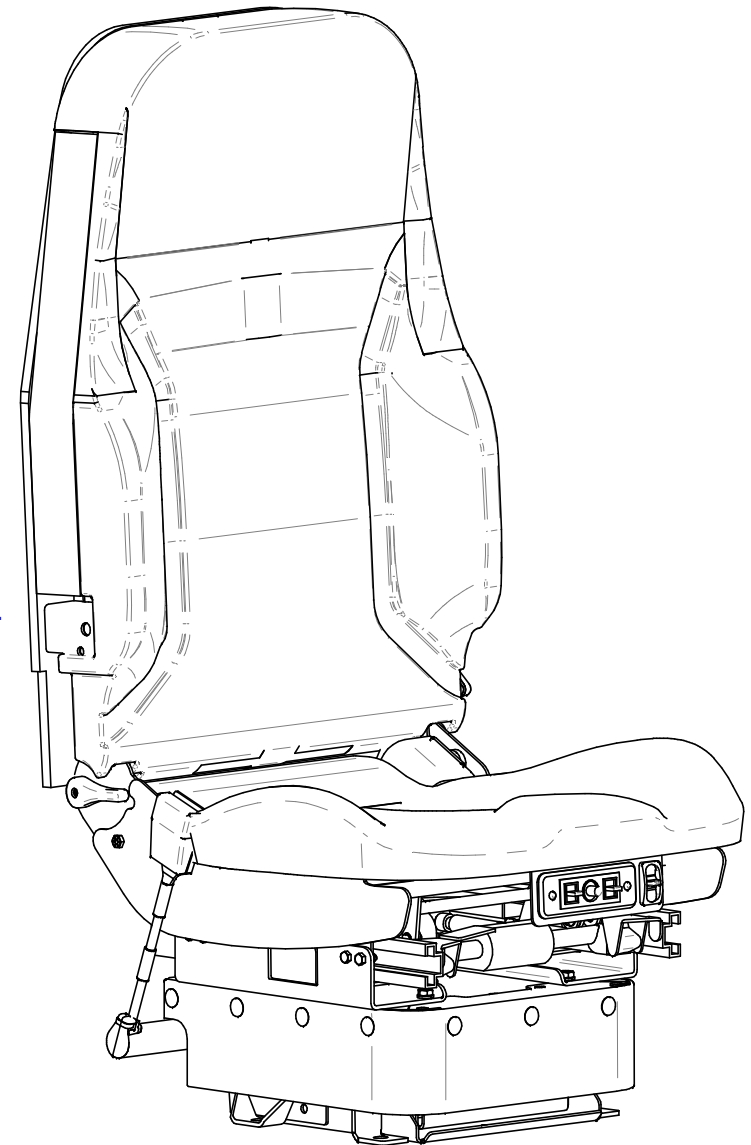

HOSE CONNECTION DETAIL

PLEASE NOTE
This drawing, owned by Seats Incorporated Reedsburg, WI, is conditionally loaned and its disclosure to the recipient is in confidence. In receiving it, the recipient agrees not to reproduce or copy it in whole or part without written consent or to furnish information from it to others or to make any use of it that is, or may be injurious or damaging to Seats Incorporated in any way, and to return it immediately upon request. Seats Incorporated

REV	DESCRIPTION	DATE	APPROVED
REVISIONS			
DIMENSIONAL TOLERANCES UNLESS OTHERWISE SPECIFIED: FRACTIONAL ± 1/2" 3 PLACE DECIMALS ± .010 2 PLACE DECIMALS ± .030 1 PLACE DECIMALS ± .50 ANGLES ± 1.0° INTERNAL FEATURES ± .003		 SEATS INCORPORATED 1515 INDUSTRIAL ST. REEDSBURG, WI 53959	
TITLE CAM SUSPENSION REPLACEMENT KIT			
DRAWN BY	DATE	SIZE	FSCM NO. PART NO.
APPROVED BY	DATE	B 09704	186094
FILE NAME: 186094.dft		DO NOT SCALE PRINT	EST WEIGHT: 38.473 lbm SHEET 2 OF 4

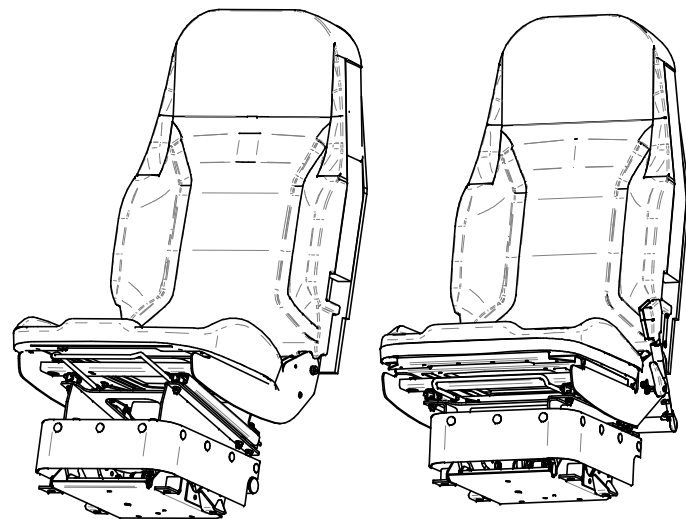




FOR SEATS WITH METAL CUSHION PANS

SEAT NUMBER / PIERCE NUMBER
 180002 / 1640008 OR 2234441
 180014 / 1640017


REPLACEMENT INSTRUCTIONS


1. REMOVE (2) BOLTS AND WASHERS HOLDING ICP TO SUSPENSION, REMOVE ICP, SET ASIDE. DISCARD HARDWARE.
2. REMOVE (6) BOLTS AND WASHERS HOLDING RISER TO SUSPENSION. DISCARD HARDWARE
3. REMOVE SEAT UPPER AND RISER ASM, SET ASIDE.
4. REMOVE SKIRT WITH BRACKET OFF SUSPENSION, SET ASIDE.
5. CUT EXISTING AIR LINE CLOSE TO AIR SPRING.
6. REMOVE OLD SUSPENSION FROM FLOOR, DISCARD.
7. INSTALL NEW REPLACEMENT SUSPENSION TO FLOOR.
8. PLACE SKIRT WITH BRACKET ON NEW SUSPENSION, ALIGNING HOLES.
9. ATTACH 26" AIR HOSE TO AIR SPRING (NEW SUSPENSION).
10. REMOVE ORIGINAL CONTROL BRACKET FROM UNDER CUSHION. DISCARD HARDWARE
 REMOVE WIRING FROM BACK OF CONTROLS, REMOVE CONTROLS FROM OLD BRACKET, CUT AIR SUPPLY HOSE AT AIR VALVE
 RE-INSTALL CONTROLS INTO NEW BRACKET.
 INSTALL NEW AIR PADDLE VALVE IN BRACKET.
11. CONNECT AIR SUPPLY HOSE TO PADDLE VALVE, (IF NEEDED, USING SUPPLIED 18" HOSE AND UNION).
 CONNECT AIR HOSE (21" SUPPLIED HOSE) FROM AIR SPRING TO PADDLE VALVE.
12. SCREW NEW BRACKET TO CUSHION PAN, RE-CONNECT CONTROL WIRING.
13. PLACE SEAT UPPER & RISER ASM ON SUSPENSION & SKIRT.
 INSTALL NEW (6) SCREWS AND WASHERS TO SUSPENSION.
14. ATTACH ICP WITH (2) NEW SCREWS AND WASHERS TO SUSPENSION.
15. BE SURE ALL HARDWARE HAS BEEN SECURELY FASTENED.
16. INSPECT AND TEST ALL FUNCTIONS.

TORQUE VALUE:
 7/16-20 = 55 FT.LB.
 3/8-16 = 31 FT.LB.
 1/4-20 = 43 IN. LB.

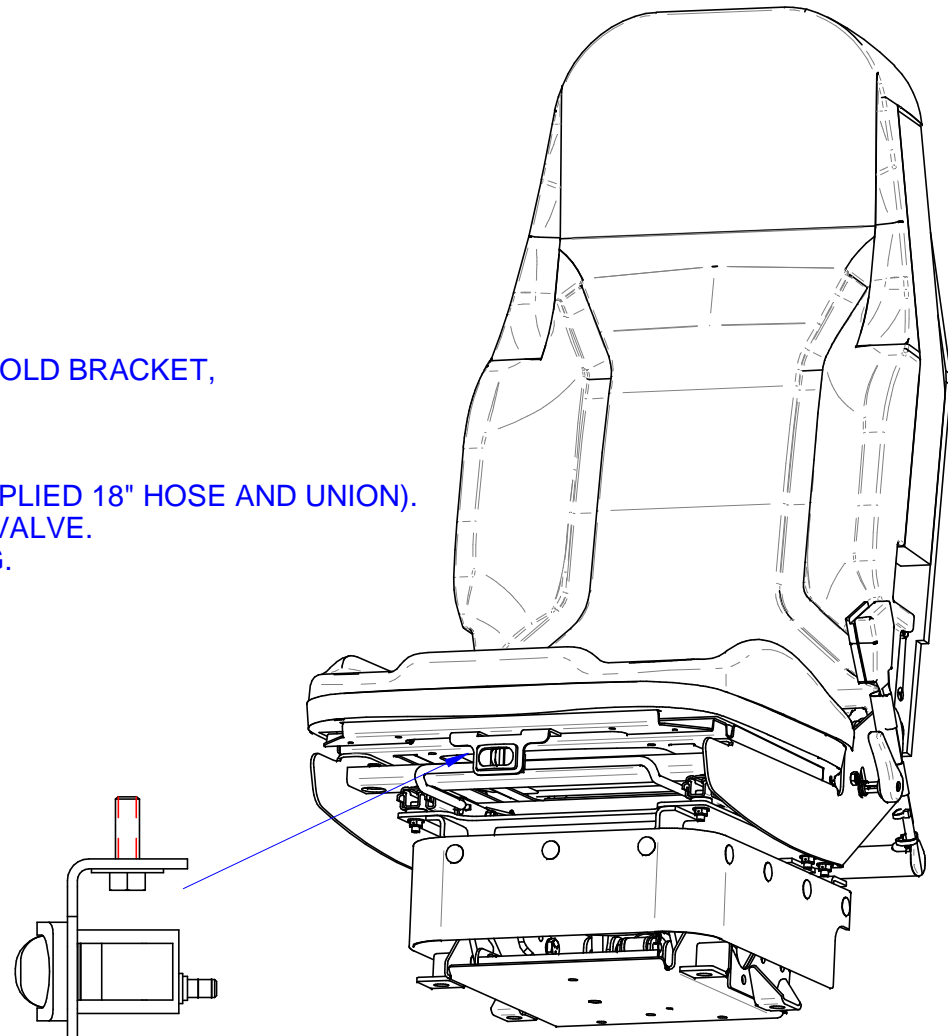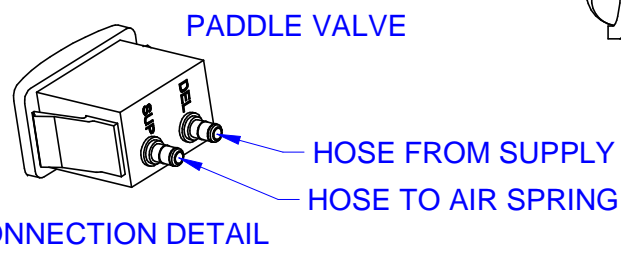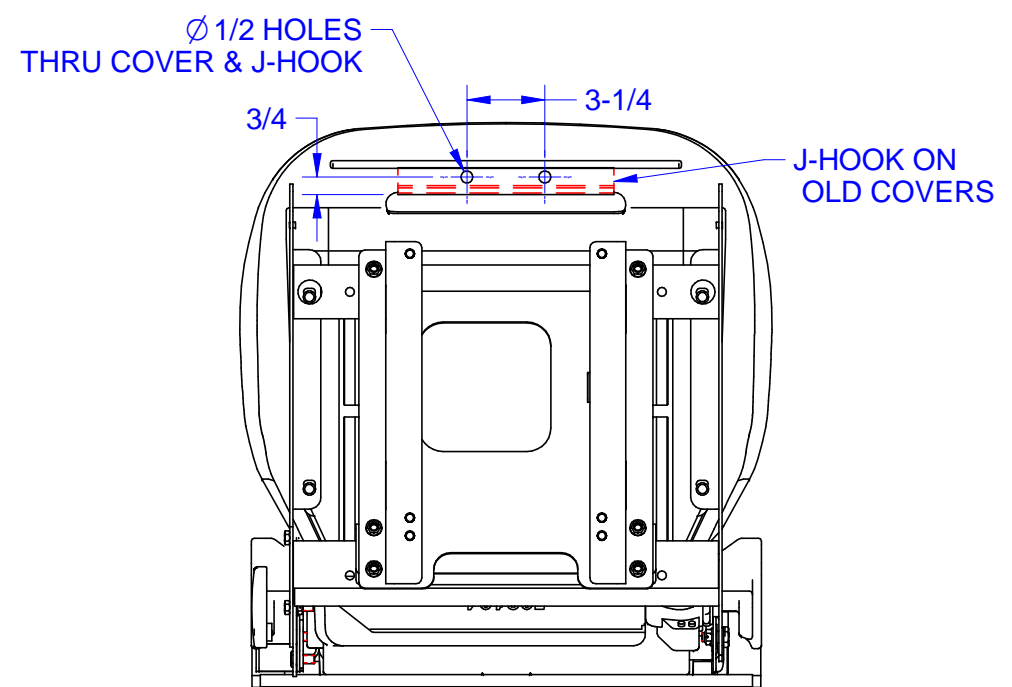

PLEASE NOTE
 This drawing, owned by Seats Incorporated Reedsburg, WI, is conditionally loaned and its disclosure to the recipient is in confidence. In receiving it, the recipient agrees not to reproduce or copy it in whole or part without written consent or to furnish information from it to others or to make any use of it that is, or may be injurious or damaging to Seats Incorporated in any way, and to return it immediately upon request. Seats Incorporated

REV	DESCRIPTION	DATE	APPROVED
REVISIONS			
DIMENSIONAL TOLERANCES UNLESS OTHERWISE SPECIFIED: FRACTIONAL ± 1/2" 3 PLACE DECIMALS ± .010 2 PLACE DECIMALS ± .030 1 PLACE DECIMALS ± .50 ANGLES ± 1.0° INTERNAL FEATURES ± .003		 SEATS INCORPORATED 1515 INDUSTRIAL ST. REEDSBURG, WI 53959	
TITLE			
CAM SUSPENSION REPLACEMENT KIT			
DRAWN BY	DATE	SIZE	FSCM NO. PART NO.
APPROVED BY	DATE	B 09704	186094
FILE NAME: 186094.dft		DO NOT SCALE PRINT	EST WEIGHT: 38.473 lbm SHEET 3 OF 4

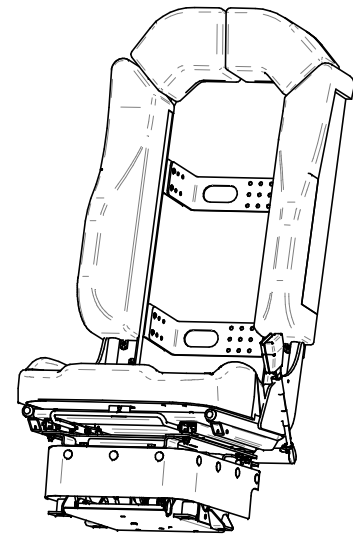


FOR SEATS WITH WOOD CUSHION BOARDS

SEAT NUMBER / PIERCE NUMBER

- 180010 / 1640014
- 182300 / 2030570
- 182301 / 2030566
- 182302 / 2030564
- 182303 / 2030568


REPLACEMENT INSTRUCTIONS

1. REMOVE (2) BOLTS AND WASHERS HOLDING ICP TO SUSPENSION, REMOVE ICP, SET ASIDE. DISCARD HARDWARE.
2. REMOVE (6) BOLTS AND WASHERS HOLDING RISER TO SUSPENSION. DISCARD HARDWARE
3. REMOVE SEAT UPPER AND RISER ASM, SET ASIDE.
4. REMOVE SKIRT WITH BRACKET OFF SUSPENSION, SET ASIDE.
5. CUT EXISTING AIR LINE CLOSE TO AIR SPRING.
6. REMOVE OLD SUSPENSION FROM FLOOR, DISCARD.
7. INSTALL NEW REPLACEMENT SUSPENSION TO FLOOR.
8. PLACE SKIRT WITH BRACKET ON NEW SUSPENSION, ALIGNING HOLES.
9. ATTACH 26" AIR HOSE TO AIR SPRING (NEW SUSPENSION).
10. REMOVE ORIGINAL CONTROL BRACKET FROM UNDER CUSHION. DISCARD HARDWARE
REMOVE WIRING FROM BACK OF CONTROLS, REMOVE CONTROLS FROM OLD BRACKET, CUT AIR SUPPLY HOSE AT AIR VALVE
RE-INSTALL CONTROLS INTO NEW BRACKET.
INSTALL NEW AIR PADDLE VALVE IN BRACKET.
11. CONNECT AIR SUPPLY HOSE TO PADDLE VALVE, (IF NEEDED, USING SUPPLIED 18" HOSE AND UNION).
CONNECT AIR HOSE (21" SUPPLIED HOSE) FROM AIR SPRING TO PADDLE VALVE.
12. SCREW NEW BRACKET TO CUSHION PAN, RE-CONNECT CONTROL WIRING.
13. PLACE SEAT UPPER & RISER ASM ON SUSPENSION & SKIRT.
INSTALL NEW (6) SCREWS AND WASHERS TO SUSPENSION.
14. ATTACH ICP WITH (2) NEW SCREWS AND WASHERS TO SUSPENSION.
15. BE SURE ALL HARDWARE HAS BEEN SECURELY FASTENED.
16. INSPECT AND TEST ALL FUNCTIONS.

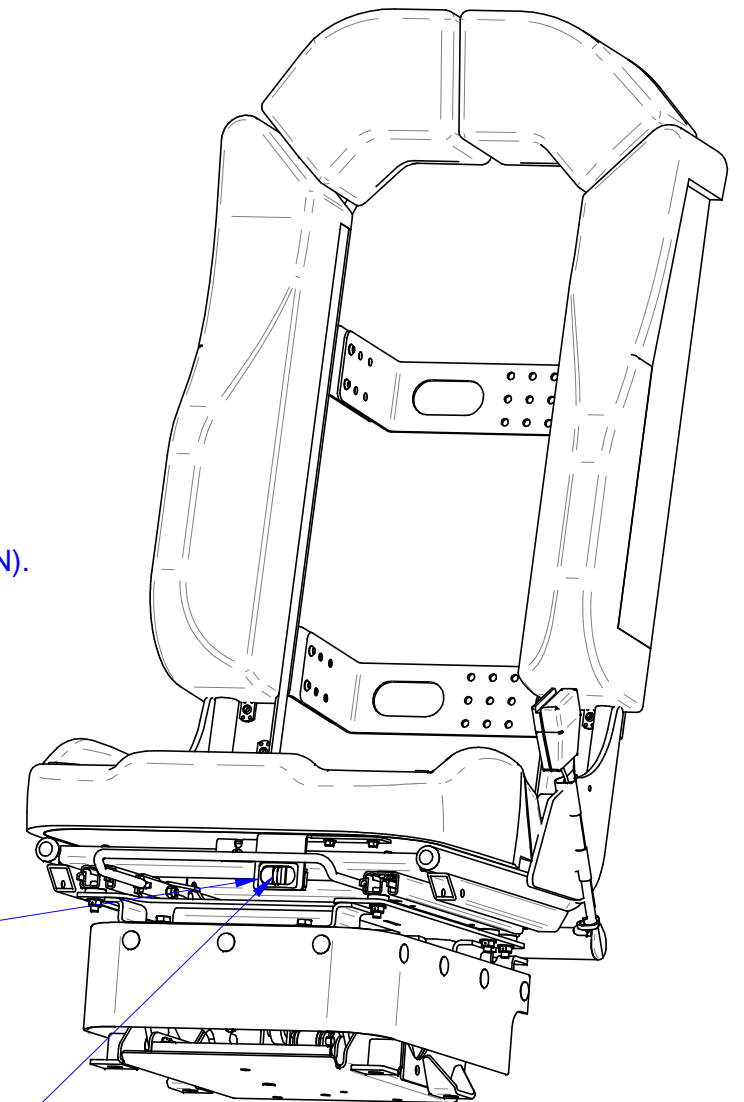


TORQUE VALUE:
7/16-20 = 55 FT.LB.
3/8-16 = 31 FT.LB.
1/4-20 = 43 IN. LB.


BRACKET FLUSH WITH BOARD EDGE

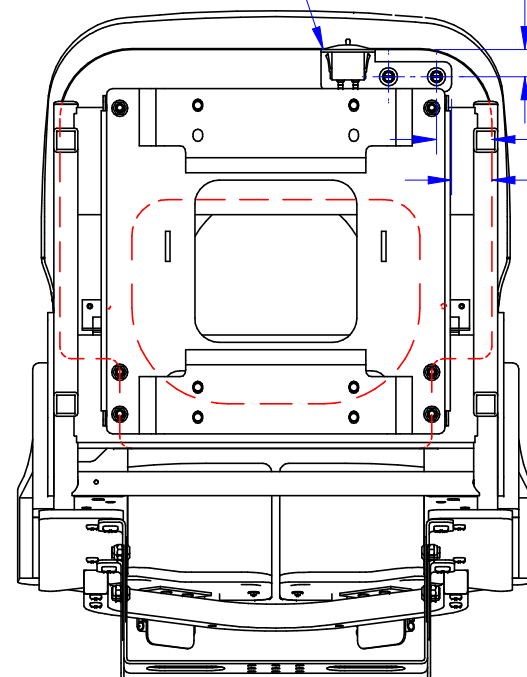


- 1.13 EDGE OF BOARD
- 2.30 TO HOLE
- 1.68 TO BRKT EDGE OF BOARD

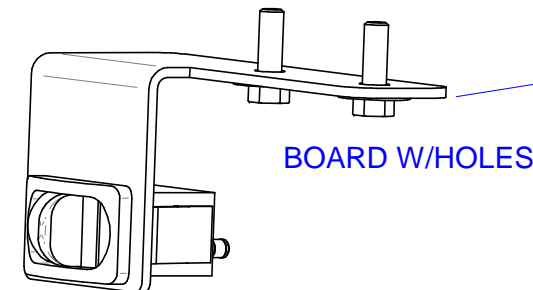

BOARD W/HOLES

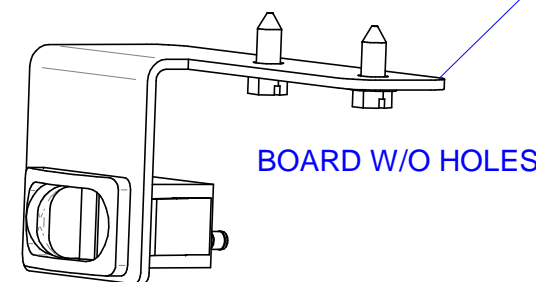

BOARD W/O HOLES

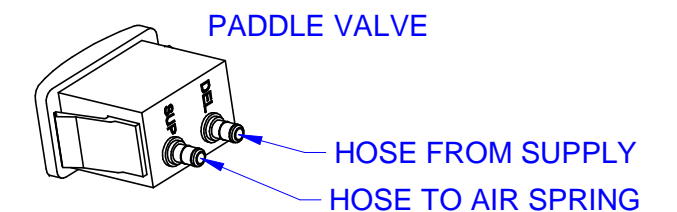

PADDLE VALVE

- HOSE FROM SUPPLY
- HOSE TO AIR SPRING

HOSE CONNECTION DETAIL

PLEASE NOTE
This drawing, owned by Seats Incorporated Reedsburg, WI, is conditionally loaned and its disclosure to the recipient is in confidence. In receiving it, the recipient agrees not to reproduce or copy it in whole or part without written consent or to furnish information from it to others or to make any use of it that is, or may be injurious or damaging to Seats Incorporated in any way, and to return it immediately upon request. Seats Incorporated

REV	DESCRIPTION	DATE	APPROVED
REVISIONS			
DIMENSIONAL TOLERANCES UNLESS OTHERWISE SPECIFIED: FRACTIONAL ± 1/2" 3 PLACE DECIMALS ± .010 2 PLACE DECIMALS ± .030 1 PLACE DECIMALS ± .50 ANGLES ± 1.0° INTERNAL FEATURES ± .003		SEATS INCORPORATED 1515 INDUSTRIAL ST. REEDSBURG, WI 53959	
TITLE			
CAM SUSPENSION REPLACEMENT KIT			
DRAWN BY	DATE	SIZE	FSCM NO. PART NO.
		B	09704 186094
APPROVED BY	DATE	DO NOT SCALE PRINT	
		EST WEIGHT: 38.473 lbm SHEET 4 OF 4	
FILE NAME: 186094.dft			